



### 1. Typical Eaves Detail

scale 1:10

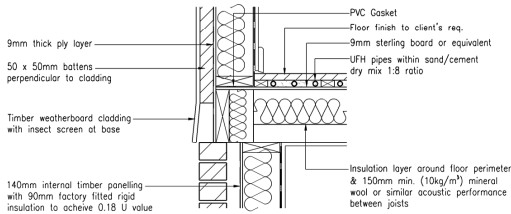


### 2a. Intermediate Floor Detail - External Weatherboard

scale 1:10

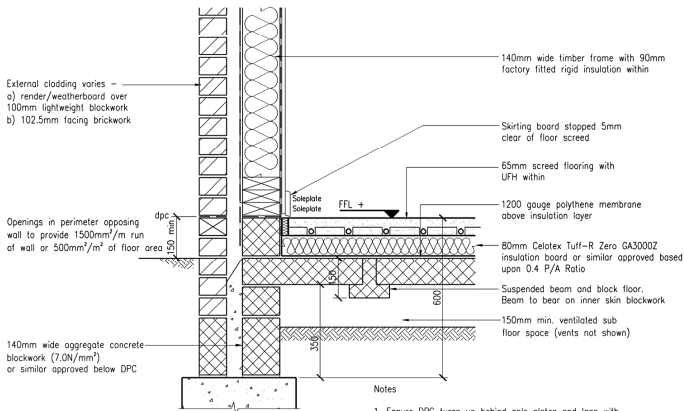


### 3. Typical Foundation / Ground Floor Detail

scale 1:10

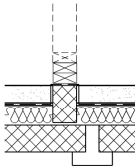

### 6. Non Load-bearing Wall Detail

scale 1:10

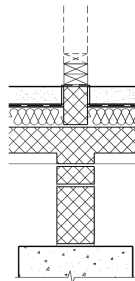

### 7. Load-bearing Wall Detail

scale 1:10

Notes:

Dimensions and levels shown are to be checked before work commences.

All building work is to comply with current Building Regulations & British Standards and to manufacturers specifications if noted.

All structural elements shown are a guide only and are to be verified by a Structural Engineer and/or Building Control Authorities prior to construction.

Rev	Date	Description	By



**Solo Timber Frame**  
The Byre, Hodore Farm, Hartfield,  
East Sussex TN7 4AR  
Tel No.: 01892 771354  
enquiries@solo timber frame.co.uk  
www.solo timber frame.co.uk

Copyright in this drawing and work executed is and remains the property of Solo Timber Frame and or its subsidiaries in accordance with the provisions of the Copyright Act.  
Permission to produce copies or modify drawings in whole or in part for any purpose should be obtained from Solo Timber Frame and any such reproduction should include this and the foregoing statement.

Project

Drawing Title

**Details**

Scale	Date	Drawn	Checked
Drawing No.			
Rev			
-			